

WARNING JACK SAFETY

Any piece of equipment can be dangerous if not operated properly. **YOU** are responsible for the safe operation of this equipment. The operator must carefully read and follow any warnings, safety signs and instructions provided with or located on the equipment. Do not remove, defeat, deface or render inoperable any of the safety devices or warnings on this equipment. If any safety devices or warnings have been removed, defeated, defaced or rendered inoperable, **DO NOT USE THIS EQUIPMENT!!!**

⚠ WARNING: This product can expose you to chemicals including naphthalene and benzene from petroleum products which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov

IMPORTANT SAFETY RULES TO FOLLOW

- Do not lift more than the rated capacity of the jack.
- Use the jack on hard, level surfaces only. Never use a jack on a slope or soft surfaces.
- Do not allow load to cock on jack, as jack may kick out causing injury to the operator or load to fall.
- Keep all body parts including arms, legs, fingers and toes clear of lifted load at all times.
- When using more than one jack to lift a load, each jack must have the lifting capacity of the entire load being lifted.
- Support raised loads with the appropriate supports never use the jack as the sole means of support.
- Keep lifted loads as low as possible and do not force extension screw past its safety stop.
- Remove the handle from the jack when not in use.
- Do not add weight to supported loads.

VEHICLE USE ADDED INSTRUCTIONS

Know where to place the jack. **Before** jacking up the vehicle, check the owner's manual for information where to place the jack.

Before jacking up the vehicle, place chocks in front of and behind the wheels to prevent it from rolling.

After jacking up the vehicle. **Always** place safety stands in the places recommended in the owner's manual.

NEVER get under, or place any body parts under a vehicle that that is held up solely by the jack.

OPERATION

To raise the jack:

1. Insert the end of the handle onto the release stem.
2. Turn the release stem clockwise completely to close the valve. Do not over tighten.
3. Insert the end of handle into the handle socket.
4. Pump the handle to raise the load.

To lower the jack:

1. Insert the end of the handle onto the release stem and turn slowly counter-clockwise to open the valve.

WARNING

Slowly turn the release valve. Turning the release valve quickly makes the load fall rapidly and may lead to the loss of the load or damage to the jack!

Failure to comply may cause serious injury and/or property damage!

2. Do not turn the release valve around more than two complete revolutions.
3. When storing the jack, retract the ram completely and wipe off any dirt, oil or other contaminants.

If the person receiving this handout will not be the user of the equipment, forward these instructions to the operator. If there is any doubt as to the operation or safety of the equipment,

DO NOT USE!!! CALL A TOOL SHED IMMEDIATELY!!!

FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN INJURY OR DEATH