

WARNING TOWABLE ELECTRIC PERSONNEL LIFT “MEWP”

Any piece of equipment can be dangerous if not operated properly. **YOU** are responsible for the safe operation of this equipment. The operator must carefully read and follow any warnings, safety signs and instructions provided with or located on the equipment. Do not remove, defeat, deface or render inoperable any of the safety devices or warnings on this equipment. If any safety devices or warnings have been removed, defeated, defaced or rendered inoperable, **DO NOT USE THIS EQUIPMENT!!! This Page Contains Basic Guidelines & Safety Warnings For This Lift. But It Is Not A Substitute For The Operators Manual. READ THE OPERATORS MANUAL!**

OPERATING INSTRUCTIONS

The *Operator’s Manual* is located in the black plastic box in the front of the operator’s platform. **Before you operate this lift, read, understand and obey all the safety rules and operating instructions in the Operator’s Manual**

Always perform a pre-operation inspection and function test prior to use for every shift as outlined in the Operators Manual!

WARNING: Only Qualified persons shall operate the equipment, and shall do so in accordance with the full provisions outlined in the operator’s manual provided. Only lessee’s Qualified operators are authorized to operate the equipment. Do not lend, or sub-lease this equipment.

OSHA LAW REQUIRES A FULL BODY HARNESS WITH LANYARD ATTACHED TO THE LANYARD ANCHORAGE BE WORN AT ALL TIMES BY EVERY PERSON IN THE PLATFORM! Never Move The Lanyard From One Anchorage Point To Another Unless The Platform Is On The Ground And The Machine Is Off!

>THIS LIFT MUST BE DISCONNECTED FROM VEHICLE BEFORE USE!<

NOTICE	
Not Equipped with Platform Rotation and/or Jib Rotate	Maximum Load: 500 lbs. / 227 kg
Total of occupants and equipment must not exceed 500 lbs. / 227 kg.	Maximum Occupants: 2

IMPORTANT SAFETY RULES TO FOLLOW

1. Do not raise platform unless base is level, all four outriggers are properly leveled with jacks firmly contacting the ground.
2. Do not adjust outriggers while platform is occupied or raised.
3. Do not move machine while the platform is raised.
4. Do not place or attach overhanging loads to any part of this machine.
5. Do not place or attach ladders in platform or against any part of this lift.
6. Do not use this machine to lift material or equipment.
7. Do not raise platform in strong or gusty winds.
8. **Maximum basket occupancy is two persons. Maximum weight capacity is 500lbs.**

9. Do not sit, stand, or climb on platform guardrails. **Both feet must always be on the platform!**
10. Do not exit platform while raised.
11. This machine is **not** electrically insulated and **will not** provide protection from contact with electrical current.
12. Maintain a safe distance from any power lines. (see chart below)
13. Keep all personnel away from machine when operating, raising, or lowering.
14. Do not leave machine unattended at any time.
15. Batteries contain acid. Always wear protective clothing and eyewear when working with batteries.
16. **Batteries Need To Be Charged Daily. Check Battery Water Before Charging**

Warning metal conducts electricity. Do Not use this Lift where it may come into contact with power lines or other electric circuits. Failure to comply to this warning will result in serious personal injury or death. For appropriate distances from High Voltage lines see chart below.

Maintain safe distances away from electrical power lines and apparatus in accordance with applicable governmental regulations and the following chart

Voltage	Minimum Safe Approachable Distance	
	Feet	Meters
Phase to Phase		
0 to 300V	Avoid Contact	
300V to 50KV	10	3.1
50KV to 200KV	15	4.6
200KV to 350KV	20	6.1
350KV to 500KV	25	7.6
500KV to 750KV	35	10.7
750KV to 1000KV	45	13.7

Allow for mast movement and electrical line sway or sag, and be aware of strong or gusty winds. Do not use the machine as a ground for welding.

⚠ WARNING: This product can expose you to sulfuric acid from batteries which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov

If the person receiving this handout will not be the user of the equipment, forward these instructions to the operator. If there is any doubt as to the operation or safety of the equipment, **DO NOT USE!!! CALL A TOOL SHED IMMEDIATELY!!! FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN INJURY OR DEATH**

To be filled out by the Yard Person doing the customer hook up or Delivery Driver delivering the lift. Upon completion attach to the original contract. Check mark the boxes after inspections are satisfactory completed.

ATS # _____ DATE _____ CONTRACT# _____

PRE-OPERATION INSPECTION and FUNCTIONS TEST

- Operator & Safety Manuals are legible and they are in the tubes at the basket
- All decals are present and legible
- The platform and ground controls function properly
- The platform and ground controls **DO NOT** function with the outriggers retracted
- Checked the cage gate and cage pivot
- Batteries are clean and filled to the proper level
- Checked the trailer and boom lift for missing or loose hardware, nuts and bolts
- Checked electrical wiring for cuts, loose terminals, broken wires, chaffing and corrosion
- Checked the hydraulic oil for proper level (AW46)
- Checked the tires for proper inflation and wear
- Checked the trailer lights for proper operation
- Checked the trailer hitch for damage, proper operation and brake fluid level
- Checked operation of manual emergency lowering valves and manual boom rotation
- Checked outriggers for excessive wear, free play or binding
- All the outrigger pads are free of grease and mud and the pivot points are properly greased
- Checked parking brake and landing gear

Checked the following components or areas for damage and improperly installed, loose or missing parts.

- Hydraulic hoses, fittings, cylinders and manifolds.
- Boom wear pads.
- Limit switches, horn and alarms.
- Nuts, bolts and other fasteners.
- Platform entry gate.

Checked entire machine for:

- Cracks in welds or structural components.
- Dents or damage to machine.

Checked that all structural and other critical components are present and all associated fasteners and pins are in place and properly tightened.

After you complete your inspection, be sure that all compartment covers are in place and latched.

INSPECTED BY (signature) _____ EMPLOYEE # _____

If any of the above items does not pass inspection, do not rent this unit.

To be filled out by the Yard Person doing the customer hook up or Delivery Driver delivering the lift. Upon completion attach it to the original contract.

CONTRACT # _____ EMPLOYEE NAME: _____

QUALIFIED OPERATOR ACKNOWLEDGMENT

1. Operator was shown the Operator and ANSI Manuals.

OPERATORS INITIALS _____

2. Operator understands that a “Pre-Operation Inspection and Function Test” must be performed before each shift. These procedures are detailed in the Operator’s Manual. If any problems or malfunctions are found **Do Not Operate This Lift!** Immediately call A Tool Shed so we can repair or replace the lift.

OPERATORS INITIALS _____

3. Before using this lift the Operator will inspect the jobsite for hazards, including but not limited to: operation surface irregularities, drop offs, holes, debris, obstructions (floor or overhead), high voltage conductors, wind, or adverse weather.

OPERATORS INITIALS _____

4. Operator Acknowledges that they are Qualified to operate this lift.

OPERATORS INITIALS _____

5. Only Qualified persons shall operate the equipment, and shall do so in accordance with the full provisions outlined in the operator’s manual provided. Only lessee’s trained operators are authorized to operate the equipment. Do not lend, or sub-lease this equipment.

OPERATORS INITIALS _____

Customer Acknowledges the Paint on this Lift is:

EXCELLENT _____ GOOD _____ FAIR _____

COMMENTS _____

OPERATORS SIGNATURE: _____

DATE: _____

PRINTED NAME: _____