

WARNING GENIE S60 PERSONNEL BOOM LIFT “MEWP”

Any piece of equipment can be dangerous if not operated properly. **YOU** are responsible for the safe operation of this equipment. The operator must carefully read and follow any warnings, safety signs and instructions provided with or located on the equipment. Do not remove, defeat, deface or render inoperable any of the safety devices or warnings on this equipment. If any safety devices or warnings have been removed, defeated, defaced, or rendered inoperable, **DO NOT USE THIS EQUIPMENT!!! This Page Contains Basic Guidelines & Safety Warnings For This Lift. But It Is Not A Substitute For The Operators Manual. READ THE OPERATORS MANUAL!**

OPERATING INSTRUCTIONS

The *Operators Manual* is located in the black plastic box in the front of the operators platform.

Before you operate this lift, read, understand, and obey all the safety rules and operating instructions in the Operators Manual Always perform a pre-operation inspection and function test prior to use for every shift as outlined in the Operators Manual!

Warning 4-Wheel Drive Aerial Lifts


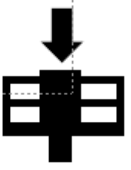

Please be aware this 4-Wheel Drive lift will only provide 1-wheel per axle drive over certain driving conditions. Under more severe conditions this could cause the lift to spin one opposing tire per axle. Caution should be used when driving over unimproved surfaces, gravel roads, rough terrain, or soft and muddy conditions. Customers are responsible for tow and recovery services should the lift become stuck. A Tool Shed does not provide any tow or recovery services.

TIP OVER HAZARD, this lift is for use on level compacted surfaces only! Warning: Misuse, operating when not level and overloading the platform will cause this Lift to Rollover. The Equipment Protection Plan does not cover damage from Rollover or to Tires. Renter is responsible for tow and recovery services should the Lift become stuck or rolled over. A Tool Shed does not provide any tow or recovery services.

WARNING: Only Qualified persons shall operate the equipment, and shall do so in accordance with the full provisions outlined in the operator’s manual provided. Only lessee’s Qualified operators are authorized to operate the equipment. Do not lend, or sub-lease this equipment.

OSHA LAW REQUIRES A FULL BODY HARNESS WITH LANYARD ATTACHED TO THE LANYARD ANCHORAGE BE WORN AT ALL TIMES BY EVERY PERSON IN THE PLATFORM! Never Move The Lanyard From One Anchorage Point To Another Unless The Platform Is On The Ground And The Engine Is Off!

\$100.00 PER HOUR TO REMOVE PAINT, PLASTER, ETC.

INSTRUCTIONS		
Maximum Allowable wind speed: 28 mph 	Maximum Capacity: 660 lbs Occupants and Equipment must not Exceed 660 lbs Maximum Occupants: 2 	Maximum Allowable Side Force: 90 lbs 

IMPORTANT SAFETY RULES TO FOLLOW

1. Do not raise or extend the boom unless the machine is on a firm level surface.
2. This machine is **not** electrically insulated and **will not** provide protection from contact with electrical current. **Maintain a safe distance from any power lines!**
3. Do not use the machine as a ground for welding.
4. Do not raise the boom in strong or gusty winds.
5. Do not drive the machine on or near uneven terrain, unstable surfaces or other hazardous conditions with the boom raised or extended.
6. Do not push off or pull toward any object outside the platform.
7. Do not place or attach overhanging loads to any part of this machine.
8. Do not place ladders or scaffolds in platform or against any part of this machine.
9. Never sit, stand, or climb on the guardrails. **Both feet must always be on the platform!**
10. Do not use machine on a moving or mobile surface or trailer or vehicle.


Warning metal conducts electricity. Do Not use this Lift where it may come into contact with power lines or other electric circuits. Failure to comply to this warning will result in serious personal injury or death. For appropriate distances from High Voltage lines see chart below.

Maintain safe distances away from electrical power lines and apparatus in accordance with applicable governmental regulations and the following chart:

Voltage Minimum Safe Approachable Distance

<u>Phase to Phase</u>	<u>Feet</u>	<u>Meters</u>
0 to 300V	Avoid Contact	
300V to 50KV	10	3.1
50KV to 200KV	15	4.6
200KV to 350KV	20	6.1
350KV to 500KV	25	7.6
500KV to 750KV	35	10.7
750KV to 1000KV	45	13.7

Allow for mast movement and electrical line sway or sag and be aware of strong or gusty winds. Do not use the machine as a ground for welding.

 **WARNING:** Operating, servicing, and maintaining this equipment can expose you to chemicals including engine exhaust, carbon monoxide and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize your exposure, avoid breathing exhaust, do not idle the engine except as necessary, operate and service your equipment in a well-ventilated area and wear gloves or wash your hands frequently when servicing your equipment. For more information go to www.P65warnings.ca.gov

THIS LIFT REQUIRES DIESEL FUEL

This equipment is subject to Section 2449 (d)(3) California Code of Regulations (A) Idling Limit - No vehicle or engines subject to this regulation may idle for more than 5 consecutive minutes. Idling of a vehicle that is owned by a rental company is the responsibility of the renter or lessee, and the rental agreement should so indicate. The idling limit does not apply to:

1. idling when queuing,
2. idling to verify that the vehicle is in safe operating condition,
3. idling for testing, servicing, repairing or diagnostic purposes,
4. idling necessary to accomplish work for which the vehicle was designed (such as operating a crane),
5. idling required to bring the machine system to operating temperature, and
6. idling necessary to ensure safe operation of the vehicle.

If the person receiving this handout will not be the user of the equipment, forward these instructions to the operator. If there is any doubt as to the operation or safety of the equipment, **DO NOT USE!!! CALL A TOOL SHED IMMEDIATELY!!! FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN INJURY OR DEATH!**

To be filled out by the Delivery Driver delivering the lift. Upon completion attach to the original contract. Check mark the boxes after inspections are satisfactory completed.

ATS # _____ DATE _____ CONTRACT# _____

Pre-operation Inspection

Be sure that the operators safety and responsibilities manuals are complete, legible and in the storage container located in the platform.

Be sure that all decals are legible and in place. See Decals section.

Check for engine oil leaks and proper oil level. Add oil if needed. See Maintenance section.

Check for hydraulic oil leaks and proper oil level. Add oil if needed. See Maintenance section.

Check for engine coolant leaks and proper level of coolant. Add coolant if needed. See Maintenance section.

Check for battery fluid leaks and proper fluid level. Add distilled water if needed. See Maintenance section.

Check the following components or areas for damage, improperly installed or missing parts and unauthorized modifications:

Electrical components, wiring and electrical cables

Hydraulic hoses, fittings, cylinders and manifolds

Fuel and hydraulic tanks

Drive and turntable motors and drive hubs

Boom wear pads

Tires and wheels

Engine and related components

Limit switches and horn

Alarms and beacons (if equipped)

Nuts, bolts and other fasteners

Platform entry mid-rail or gate

Check entire machine for:

Cracks in welds or structural components

Dents or damage to machine

Be sure that all structural and other critical components are present and all associated fasteners and pins are in place and properly tightened.

After you complete your inspection, be sure that all compartment covers are in place and latched.

Function Tests At the Ground Controls

The ground controls function properly

Test Emergency Stop

Test the Machine Functions

Test the Tilt Sensor

Function Tests At the Platform Controls

Test Emergency Stop

Test the Horn

Test the Foot Switch

Test Machine Functions

Test the Steering

Test Drive and Braking

Test the Drive Enable System

Test Limited Drive Speed

INSPECTED BY: (signature) _____

PRINT NAME: _____

If any of the above items do not pass inspection, do not rent this unit.

To be filled out by the Yard Person doing the customer hook up or Delivery Driver delivering the lift. Upon completion attach it to the original contract.

CONTRACT # _____ **EMPLOYEE NAME:** _____

QUALIFIED OPERATOR ACKNOWLEDGMENT

1. Operator was shown the Operator and ANSI Manuals.

OPERATORS INITIALS _____

2. Operator understands that a “Pre-Operation Inspection and Function Test” must be performed before each shift. These procedures are detailed in the Operator’s Manual. If any problems or malfunctions are found **Do Not Operate This Lift!** Immediately call A Tool Shed so we can repair or replace the lift.

OPERATORS INITIALS _____

3. Before using this lift the Operator will inspect the jobsite for hazards, including but not limited to: operation surface irregularities, drop offs, holes, debris, obstructions (floor or overhead), high voltage conductors, wind, or adverse weather.

OPERATORS INITIALS _____

4. Operator Acknowledges that they are Qualified to operate this lift.

OPERATORS INITIALS _____

5. Only Qualified persons shall operate the equipment and shall do so in accordance with the full provisions outlined in the operator’s manual provided. Only lessee’s trained operators are authorized to operate the equipment. Do not lend, or sub-lease this equipment.

OPERATORS INITIALS _____

Customer Acknowledges the Paint on this Lift is:

EXCELLENT _____ **GOOD** _____ **FAIR** _____

COMMENTS _____

OPERATORS SIGNATURE: _____

DATE: _____

PRINTED NAME: _____